

MODEL

FWD-42PV

PROTOCOL MANUAL

(User Control)

Preliminary
as of
February 22, 2005

SONY Corporation
Home Electronics Network Company



1. Communication Parameters

Communication Method	RS232C
Synchronous Method	Asynchronous
Baud Rate	9600bps
Character Length	8bit
Parity	None
Start Bit Length	1bit
Stop Bit Length	1bit
Flow Control	None

2. Pin Assignment


Monitor side : D-sub 9pin

Host side : D-sub 9pin

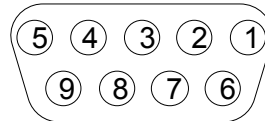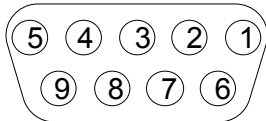

Pin №	Function
1	NC
2	TD
3	RD
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

Pin №	Function
1	NC
2	RD
3	TD
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC



3. Communication Data Format

(a)Control message

№	Item	Value
1	Header	0x8C: Control
2	Category	0xXX
3	Function	0xXX
4	Data1 (Length)	0xXX
5	Data2 (Data1)	0xXX
:	:	0xXX
:	:	0xXX
X	DataX	0xXX
X+1	Check Sum	0xXX

* Check Sum: The total from №1 to №X, when value exceeds 255, 1byte of data is confirmed the bottom.

* When sending controls in sequence, keep interval of more than 500ms between the commands.

* When sending an enquiry right after sending the control of a same command, also keep interval of more than 5 between the commands.

(b)Enquiry message

№	Item	Value
1	Header	0x83: Enquiry
2	Category	0xXX
3	Function	0xXX
4	Data1	0xFF
5	Data2	0xFF
6	Check Sum	0xXX

* Check Sum: The total from №1 to №5, when value exceeds 255, 1byte of data is confirmed the bottom.

(c)Answer message

(1)Control answer

№	Item	Value
1	Header	0x70: Answer
2	Answer*	0x00: Completed
		0x01: Limit Over
		0x02: Limit Under
		0x03: Command Canceled
3	Check Sum	0xXX

* 0x00: Completed

Normal response.

0x01: Limit Over

The packet was received normally, but the data value was over the upper limit. Forcedly the monitor adjusted the data to maximum value.

0x02: Limit Under

The packet was received normally, but the data value was under the lower limit. Forcedly the monitor adjusted the data to minimum value.

0x03: Command Canceled

The packet was received normally, but the command was cancelled because the function was not in adjustable mode, such as "--" a function displayed as in user menu.

* Check Sum: The total from №1 to №2, when value exceeds 255, 1byte of data is confirmed the bottom.

(2)Enquiry answer (Complete)

№	Item	Value
1	Header	0x70: Answer
2	Answer	0x00: Completed
3	Return Data Size	0xXX
4	Return Data1	0xXX
:	:	0xXX
:	:	0xXX
X	Return DataX	0xXX
X+1	Check Sum	0xXX

* 0x00: Completed

Normal response.

* Return Data returns the read value.

* Check Sum: The total from №1 to №X, when value exceeds 255, 1byte of data is confirmed the bottom.

(3)Enquiry answer (Command cancel)

№	Item	Value
1	Header	0x70: Answer
2	Answer	0x03: Command Canceled
3	Check Sum	0xXX

0x03: Command Canceled The packet was received normally, but the command was cancelled because the function was not in adjustable mode, such as "--" a function displayed as in user menu.

* Check Sum: The total from №1 to №2, when value exceeds 255. 1byte of data is confirmed the bottom.

(4)Error answer

№	Item	Value
1	Header	0xE0: Answer
2	Answer*	0x00: No Function Error
		0x01: Check Sum Error
		0x02: Data Length Error
3	Check Sum	0xXX

* 0x00: No Function Error Packet header, category of function codes do not exist in this protocol.
0x01: Check Sum Error The "Check Sum" value of the packet which received is wrong.
0x02: Data Length Error The "Data Num" value of the packet which received is wrong.

1. General Function

(a) Mode Control

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Control	0x8C	0x00	Code Table(1-a)[a]	0x02	Code Table (1-a)[b]	0xXX
Enquiry	0x83			0xFF		0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x01	0x71	Limit Over
	0x70	0x02	0x72	Limit Under
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Code Table (1-a)[b]	0xXX	Completed

Code Table(1-a)

[a]Function		[b]Range/Switch Code		Command			
				Control	Enquiry	Standby	Power On
0x00	Power *1	0x00	OFF	Yes	Yes	Enable	Enable
		0x01	ON				
0x01	Input Select *2	0x0A	INPUT2 RGB	Yes	Yes	Disable	Enable
		0x0B	INPUT2 COMPONENT				
		0x10	OPTION 1 VIDEO				
		0x11	OPTION 1 S VIDEO				
		0x12	OPTION 1 RGB				
		0x13	OPTION 1 COMPONENT				
0x02	Force Status Display	0x20	INPUT1 DVI	Yes	Yes	Disable	Enable
		0x00	ON				
0x03	Audio Mute	0x01	OFF	Yes	Yes	Disable	Enable
		0x00	ON				
0x04	Auto Status Display	0x00	OFF	Yes	Yes	Enable	Enable
		0x01	ON				
0x05	Closed Caption	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	CC1				
		0x02	CC2				
		0x03	CC3				
		0x04	CC4				
0x06	Color System	0x00	Auto	Yes	Yes	Disable	Enable
		0x01	NTSC				
		0x02	NTSC4.43				
		0x03	PAL				
		0x04	SECAM				
		0x05	PAL-M				
		0x06	PAL-N				
0x0B	Picture Inversion	0x07	PAL60	Yes	Yes	Disable	Enable
		0x00	OFF				
		0x01	Auto				
0x0C	Picture Orbit	0x02	On	Yes	Yes	Disable	Enable
		0x00	OFF				
0x0D	Orbit Range	0x00	Small	Yes	Yes	Disable	Enable
		0x01	Middle				
		0x02	Large				
0x0E	Orbit Cycle	0x00	10 sec	Yes	Yes	Disable	Enable
		0x01	30 sec				
		0x02	1 min				
		0x03	5 min				
0x0F	Language	0x00	Japanese	Yes	Yes	Disable	Enable
		0x01	English				
		0x02	Deutsch				
		0x03	Francais				
		0x04	Espanol				
		0x05	Italiano				

Code Table(1-a) continued

[a]Function		[b]Range/Switch Code		Command			
				Control	Enquiry	Standby	Power On
0x10	Index Number	0x01-0xFF		Yes	Yes	Disable	Enable
0x13	Power Saving	0x00	Standard	Yes	Yes	Disable	Enable
		0x01	Reduce				
0x14	Speaker Out	0x00	ON	Yes	Yes	Disable	Enable
		0x01	OFF				
0x16	HD Mode	0x00	1080i	Yes	Yes	Disable	Enable
		0x01	1035i				
0x17	RGB Mode	0x00	DTV	Yes	Yes	Disable	Enable
		0x01	PC				
0x18	Sync Mode	0x00	H/Comp	Yes	Yes	Disable	Enable
		0x01	Video				
0x1B	Clock Display	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	ON				
0x40	All White	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	ON				
0x41	BackGroud	0x00	Gray	Yes	Yes	Disable	Enable
		0x01	Dark Gray				
		0x02	Black				
0x42	Auto Dimmer	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	ON				
0x60	Digital Port	0x00	Port 1	Yes	Yes	Enable	Enable
		0x01	Port 2				
0x65	IP Setting Mode	0x00	DHCP	Yes	Yes	Enable	Enable
		0x01	Manual				
		0x02	Speed				
0x66	IP Setting Execute	0x00	No	No	Yes	Enable	Enable
		0x01	Yes				
0x67	IP Setting Result	0x00	Done	Yes	No	Enable	Enable
		0x01	Error 1 (UART Commu.)				
		0x02	Error 2 (Duplication)				
		0x03	Error 3 (IP Add Setting)				
		0x04	Error 4 (GW Add setting)				
		0x05	Error 5 (DNS1 Setting)				
		0x06	Error 6 (DNS2 Setting)				
		0x07	Error 7 (Sbnt Msk Setting)				
0x68	Speed Setting	0x00	100Mbps/Full Duplex	Yes	Yes	Enable	Enable
		0x01	100Mbps/Half Duplex				
		0x02	10Mbps/Full Duplex				
		0x03	10Mbps/Half Duplex				
		0x04	Auto				

*1: After sending the Power On/Off command, wait for 10 sec. before sending a new command. Otherwise the display may not receive the command correctly.

*2: Because of the option slots' spec difference between 42LX1 and 42PV1 and their relation with the BKM-FW32, Option2 command of LX1 is assigned as Option1 command of 42PV1

Code Table(1-a)

[a]Function		[b]Range/Switch code		Command			
				Control	Enquiry	Standby	Power On
0x25	Input Detect(Option1)	0x00	U3(HD15)	No	Yes	Disable	Enable
		0x01	U1(CVBS/Y.C)	No	Yes	Disable	Enable
		0x02	U2(BNC)	No	Yes	Disable	Enable
		0x03	Reserved	No	Yes	Disable	Enable
		0x04	UN	No	Yes	Disable	Enable
		0x05	Reserved	No	Yes	Disable	Enable
		0x06	Reserved	No	Yes	Disable	Enable
		0x07	Reserved	No	Yes	Disable	Enable
		0x08	Reserved	No	Yes	Disable	Enable
		0x09	Reserved	No	Yes	Disable	Enable
		0x0A	Reserved	No	Yes	Disable	Enable
		0x0B	Reserved	No	Yes	Disable	Enable
		0x0C	Reserved	No	Yes	Disable	Enable
		0x0D	Reserved	No	Yes	Disable	Enable
		0x0E	Reserved	No	Yes	Disable	Enable
		0x0F	Not Connect	No	Yes	Disable	Enable
0x26	Auto Shut Off	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	ON	Yes	Yes	Disable	Enable
0x27	Auto Screen Adjust	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	ON	Yes	Yes	Disable	Enable
0x30	PAP *3	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	P&P	Yes	Yes	Disable	Enable
		0x02	PinP	Yes	Yes	Disable	Enable
0x31	Active Picture	0x00	Left(P&P) /Main(PinP)	Yes	Yes	Disable	Enable
		0x01	Right(P&P)/Sub(PinP)	Yes	Yes	Disable	Enable
		0x02	Swap *3	Yes	Yes	Disable	Enable
0x32	Picture Size(P&P)	0x00-0x0E		Yes	Yes	Disable	Enable
0x33	Sub Picture Size (PinP)	0x00	Large	Yes	Yes	Disable	Enable
		0x01	Small	Yes	Yes	Disable	Enable
0x34	Picture Position(PinP) *4	0x00	Position1	Yes	Yes	Disable	Enable
		0x01	Position2	Yes	Yes	Disable	Enable
		0x02	Position3	Yes	Yes	Disable	Enable
		0x03	Position4	Yes	Yes	Disable	Enable
0x35	PAP Input Detect (Left/Main)	0x0A	INPUT2 RGB	No	Yes	Disable	Enable
		0x0B	INPUT2 COMPONENT	No	Yes	Disable	Enable
		0x10	OPTION 1 VIDEO	No	Yes	Disable	Enable
		0x11	OPTION 1 S VIDEO	No	Yes	Disable	Enable
		0x12	OPTION 1 RGB	No	Yes	Disable	Enable
		0x13	OPTION 1 COMPONENT	No	Yes	Disable	Enable
		0x20	INPUT1 DVI	No	Yes	Disable	Enable
0x36	PAP Input Detect (Right/Sub)	0x0A	INPUT2 RGB	No	Yes	Disable	Enable
		0x0B	INPUT2 COMPONENT	No	Yes	Disable	Enable
		0x10	OPTION 1 VIDEO	No	Yes	Disable	Enable
		0x11	OPTION 1 S VIDEO	No	Yes	Disable	Enable
		0x12	OPTION 1 RGB	No	Yes	Disable	Enable
		0x13	OPTION 1 COMPONENT	No	Yes	Disable	Enable
		0x20	INPUT1 DVI	No	Yes	Disable	Enable

*3: In case of INPUT SELECT, PAP, and Swap (Active Picture), do a busy check by Busy To INPUT command

*4: Arrangement of Picture Position:

1	2
3	4

IP Address

Syntax	Header	Category	Function	Data1	Data2	Data3	Data4	Data5	Check Sum
Control	0x8C	0x00	0x42	0x05	Address 0 0x00-0xFF	Address 1 0x00-0xFF	Address 2 0x00-0xFF	Address 3 0x00-0xFF	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x03	0x73	Command Canceled

IP Address ex)

192.128.14.1 -->192(0xC0)...Address 0
128(0x80)...Address 1
14(0x0E)...Address 2
1(0x01)...Address 3

* IP Address commands are active also in stand-by mode.

Code Table(1-a)

[a]Function		[b]Range/Switch code		Command			
				Control	Enquiry	Standby	Power On
0x42	IP Address			Yes	Yes	Enable	Enable
0x45	Control Mode	0x00	Main+Remocon	Yes	Yes	Disable	Enable
		0x01	Main				
		0x02	Remocon				
		0x03	Both Disable				
0x46	On Off Timer Mode	0x00	Every Day	Yes	Yes	Enable	Enable
		0x01	Day Of Week				
0x47	On Timer Enable	bit0	Sunday 1: Enable, 0: Disable	Yes	Yes	Enable	Enable
		bit1	Monday 1: Enable, 0: Disable				
		bit2	Tuesday 1: Enable, 0: Disable				
		bit3	Wednesday 1: Enable, 0: Disable				
		bit4	Thursday 1: Enable, 0: Disable				
		bit5	Friday 1: Enable, 0: Disable				
		bit6	Saturday 1: Enable, 0: Disable				
		bit7	Every day 1: Enable, 0: Disable				
0x48	O f f Timer Enable	bit0	Sunday 1: Enable, 0: Disable	Yes	Yes	Enable	Enable
		bit1	Monday 1: Enable, 0: Disable				
		bit2	Tuesday 1: Enable, 0: Disable				
		bit3	Wednesday 1: Enable, 0: Disable				
		bit4	Thursday 1: Enable, 0: Disable				
		bit5	Friday 1: Enable, 0: Disable				
		bit6	Saturday 1: Enable, 0: Disable				
		bit7	Every day 1: Enable, 0: Disable				

IP Address Setting

IP Address

Syntax	Header	Category	Function	Data1	Data2	Data3	Data4	Data5	Check Sum
Control	0x8C	0x00	0x42	0x05	Address 0 0x00-0xFF	Address 1 0x00-0xFF	Address 2 0x00-0xFF	Address 3 0x00-0xFF	0xXX

Subnet Mask

Syntax	Header	Category	Function	Data1	Data2	Data3	Data4	Data5	Check Sum
Control	0x8C	0x00	0x61	0x05	Address 0 0x00-0xFF	Address 1 0x00-0xFF	Address 2 0x00-0xFF	Address 3 0x00-0xFF	0xXX

Gateway Address

Syntax	Header	Category	Function	Data1	Data2	Data3	Data4	Data5	Check Sum
Control	0x8C	0x00	0x62	0x05	Address 0 0x00-0xFF	Address 1 0x00-0xFF	Address 2 0x00-0xFF	Address 3 0x00-0xFF	0xXX

DNS Primary

Syntax	Header	Category	Function	Data1	Data2	Data3	Data4	Data5	Check Sum
Control	0x8C	0x00	0x63	0x05	Address 0 0x00-0xFF	Address 1 0x00-0xFF	Address 2 0x00-0xFF	Address 3 0x00-0xFF	0xXX

DNS Secondary

Syntax	Header	Category	Function	Data1	Data2	Data3	Data4	Data5	Check Sum
Control	0x8C	0x00	0x64	0x05	Address 0 0x00-0xFF	Address 1 0x00-0xFF	Address 2 0x00-0xFF	Address 3 0x00-0xFF	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x03	0x73	Command Canceled

IP Address ex)
 192.128.14.1 --> 192(0xC0)...Address 0
 128(0x80)...Address 1
 14(0x0E)...Address 2
 1(0x01)...Address 3

* IP Address commands are active also in stand-by mode.

Code Table(1-a)

[a]Function	[b]Range/Switch code	Command			
		Control	Enquiry	Standby	Power On
0x42	IP Address	Yes	Yes	Enable	Enable
0x61	Subnet Mask	Yes	Yes	Enable	Enable
0x62	Gateway Address	Yes	Yes	Enable	Enable
0x63	DNS Primary	Yes	Yes	Enable	Enable
0x64	DNS Secondary	Yes	Yes	Enable	Enable

(b)Color Matrix

Syntax	Header	Category	Function	Data1	Data2	Data3	Data3	Check Sum
Control	0x8C	0x00	Code Table(1-b)[a]	0x04	Code Table (1-c)	Code Table (1-b)[b]	Code Table (1-d)	0xXX

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x00	Code Table(1-b)[a]	Code Table (1-c)	Code Table (1-d)	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Return Data3	Check Sum	
Enquiry	0x70	0x00	0x04	Code Table (1-c)	Code Table (1-b)[b]	Code Table (1-d)	0xXX	Completed

Code Table(1-b)

[a]Function		[b]Range/Switch code		Command			
				Control	Enquiry	Standby	Power On
0x1D	Color Matrix	0x00	YCbCr	Yes	Yes	Disable	Enable
		0x01	YPbPr				

Code Table(1-c)

Format Select	
0x00	480p
0x01	1080i
0x02	720p
0x03	480i

Code Table(1-d)

Input Select	
0x00	Input2
0x01	Option1
0x02	Option2

Invalid in 32LX1 System

(c)Time Control

- Clock Set (Hour, Minute)

Syntax	Header	Category	Function	Data1	Data2	Data3	Check Sum
Control	0x8C	0x00	0x22	0x03	Hour: 0x00-0x17	Minute: 0x00-0x3B	0xXX

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x00	0x22	0xFF	0xFF	0xA3

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x01	0x71	Limit Over
	0x70	0x02	0x72	Limit Under
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Check Sum	
Enquiry	0x70	0x00	0x03	Hour: * 0x00-0x17	Minute: 0x00-0x3B	0xXX	Completed

* If Clock Set is not done after ex-factory, Return Data is set as Hour: 0x80, Minute: 0x00.

- Clock Set (Week)

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Control	0x8C	0x00	0x23	0x02	Week: Code Table(1-e)	0xXX

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x00	0x23	0xFF	0xFF	0xA4

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x01	0x71	Limit Over
	0x70	0x02	0x72	Limit Under
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Week: Code Table(1-e)	0xXX	Completed

Code Table(1-e)

Week Select	
0x00	Sunday
0x01	Monday
0x02	Tuesday
0x03	Wednesday
0x04	Thursday
0x05	Friday
0x06	Saturday

- On Timer, Off Timer

Syntax	Header	Category	Function	Data1	Data2	Data3	Check Sum
Control	0x8C	0x00	Code Table(1-f)[a]	0x03	Hour: 0x00-0x17	Minute: 0x00-0x3B	0xXX

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x00	Code Table(1-f)[a]	0xFF	0xFF	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x01	0x71	Limit Over
	0x70	0x02	0x72	Limit Under
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Check Sum	
Enquiry	0x70	0x00	0x03	Hour: 0x00-0x17	Minute: 0x00-0x3B	0xXX	Completed

Code Table(1-f)

[a]Function		[b]Range/Switch code	Command			
			Control	Enquiry	Standby	Power On
Picture Inversion						
0x20	Invert Start Time		Yes	Yes	Disable	Enable
0x21	Invert End Time		Yes	Yes	Disable	Enable
Clock Set						
0x22	Hour, Minute		Yes	Yes	Disable	Enable
0x23	Week		Yes	Yes	Disable	Enable
On Timer						
0x50	Sunday		Yes	Yes	Disable	Enable
0x51	Monday		Yes	Yes	Disable	Enable
0x52	Tuesday		Yes	Yes	Disable	Enable
0x53	Wednesday		Yes	Yes	Disable	Enable
0x54	Thursday		Yes	Yes	Disable	Enable
0x55	Friday		Yes	Yes	Disable	Enable
0x56	Saturday		Yes	Yes	Disable	Enable
0x57	Every day		Yes	Yes	Disable	Enable
Off Timer						
0x58	Sunday		Yes	Yes	Disable	Enable
0x59	Monday		Yes	Yes	Disable	Enable
0x5A	Tuesday		Yes	Yes	Disable	Enable
0x5B	Wednesday		Yes	Yes	Disable	Enable
0x5C	Thursday		Yes	Yes	Disable	Enable
0x5D	Friday		Yes	Yes	Disable	Enable
0x5E	Saturday		Yes	Yes	Disable	Enable
0x5F	Every day		Yes	Yes	Disable	Enable

2. Picture/Sound

(a)Picture/Sound

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Control	0x8C	0x10	Code Table(2-a)[a]	0x02	Code Table (2-a)[b]	0xXX
Enquiry	0x83			0xFF	0xFF	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x01	0x71	Limit Over
	0x70	0x02	0x72	Limit Under
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Code Table (2-a)[b]	0xXX	Completed

Code Table(2-a)

[a]Function		[b]Range/Switch code		Command			
				Control	Enquiry	Standby	Power On
0x00	Contrast	0x00-0x64		Yes	Yes	Disable	Enable
0x01	Brightness	0x00-0x64		Yes	Yes	Disable	Enable
0x02	Chroma	0x00-0x64		Yes	Yes	Disable	Enable
0x03	Phase	0x00-0x64		Yes	Yes	Disable	Enable
0x04	Color Temp	0x00	High	Yes	Yes	Disable	Enable
		0x01	Mid				
		0x02	Low				
		0x03	Color1				
		0x04	Color2				
		0x05	Color3				
0x09	Sharpness	0x00-0xFF		Yes	Yes	Disable	Enable
0x0A	NR	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	Low				
		0x02	Mid				
		0x03	High				
0x0B	Cinema Drive	0x00	Auto	Yes	Yes	Disable	Enable
		0x01	OFF				
0x0C	Dynamic Picture	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	Low				
		0x02	High				
0x0D	Color Correct	0x00	ON	Yes	Yes	Disable	Enable
		0x01	OFF				
0x0E	Gamma Correct	0x00	High	Yes	Yes	Disable	Enable
		0x01	Mid				
		0x02	Low				
0x10	Picture Mode	0x00	Standard	Yes	Yes	Disable	Enable
		0x01	Dynamic				
		0x02	User1				
		0x03	User2				
		0x04	User3				
0x30	Volume	0x00-0x64		Yes	Yes	Enable	Enable
0x31	Treble	0x00-0x64		Yes	Yes	Disable	Enable
0x32	Bass	0x00-0x64		Yes	Yes	Disable	Enable
0x33	Balance	0x00-0x64		Yes	Yes	Disable	Enable
0x34	Surround	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	Hall				
		0x02	Simulate				

(b)Color Temp

Syntax	Header	Category	Function	Data1	Data2	Data3	Check Sum
Control	0x8C	0x10	Code Table(2-b)[a]	0x03	Code Table (2- c)	Code Table (2-b)[b]	0xXX

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x10	Code Table(2-b)[a]	Code Table	0xFF	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Check Sum	
Enquiry	0x70	0x00	0x03	Code Table (2-c)	Code Table (2-b)[b]	0xXX	Completed

Code Table(2-b)

[a]Function		[b]Range/Switch code	Command			
			Control	Enquiry	Standby	Power On
0x05	Red Gain	0x00-0x64	Yes	Yes	Disable	Enable
0x06	Green Gain	0x00-0x64	Yes	Yes	Disable	Enable
0x07	Blue Gain	0x00-0x64	Yes	Yes	Disable	Enable

Code Table(2-c)

Format Select	
0x03	Color1
0x04	Color2
0x05	Color3

3. Size/Shift

(a)8Bits Register

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Control	0x8C	0x20	Code Table(3-b)[a]	0x02	Code Table (3-b)[b]	0xXX
Enquiry	0x83			0xFF	0xFF	0xXX

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x01	0x71	Limit Over
	0x70	0x02	0x72	Limit Under
	0x70	0x03	0x73	Command Canceled

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Code Table (3-b)[b]	0xXX	Completed

Code Table(3-b)

[a]Function		[b]Range/Switch code		Command			
				Control	Enquiry	Standby	Power On
0x00	H Size	0x00-0x64		Yes	Yes	Disable	Enable
0x01	H Center	0x00-0x64		Yes	Yes	Disable	Enable
0x02	V Size	0x00-0x64		Yes	Yes	Disable	Enable
0x03	V Center	0x00-0x64		Yes	Yes	Disable	Enable
0x04	Zoom Mode	0x00	Wide Zoom	Yes	Yes	Disable	Enable
		0x01	Zoom				
		0x02	Full				
		0x03	Sub Title				
		0x04	Normal				
0x05	Multi Display	0x00	Standard	Yes	Yes	Disable	Enable
		0x01	x2				
		0x02	x3				
		0x03	x4				
0x07	Dot Phase	0x00-0x1F		Yes	Yes	Disable	Enable
0x08	Auto Wide	0x00	OFF	Yes	Yes	Disable	Enable
		0x01	Auto				
0x09	4:3 Mode	0x00	Normal	Yes	Yes	Disable	Enable
		0x01	Wide Zoom				
0x0B	Multi Position(x2)*	0x00	Position1	Yes	Yes	Disable	Enable
		0x01	Position2				
		0x02	Position3				
		0x03	Position4				
0x0C	Multi Position(x3)*	0x00	Position1	Yes	Yes	Disable	Enable
		0x01	Position2				
		0x02	Position3				
		0x03	Position4				
		0x04	Position5				
		0x05	Position6				
		0x06	Position7				
		0x07	Position8				
		0x08	Position9				
0x0D	Multi Position(x4)*	0x00	Position1	Yes	Yes	Disable	Enable
		0x01	Position2				
		0x02	Position3				
		0x03	Position4				
		0x04	Position5				
		0x05	Position6				
		0x06	Position7				
		0x07	Position8				
		0x08	Position9				
		0x09	Position10				
		0x0A	Position11				
		0x0B	Position12				
		0x0C	Position13				
		0x0D	Position14				
		0x0E	Position15				
		0x0F	Position16				

* Arrangement of Multi Position:

Multi Position(x2)

1	2
3	4

Multi Position(x3)

1	2	3
4	5	6
7	8	9

Multi Position(x4)

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16

4. Status Enquiry

(a) Model Name

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	0x00	0xFF	0xFF	0xB1

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Code Table (4-a)	0xFF	Completed

Code Table(4-a)

Format Select
0x22 FWD-42PV1

(b) Serial Number

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	0x01	0xFF	0xFF	0xB2

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Return Data3	Return Data4	Check Sum	
Enquiry	0x70	0x00	0x05	Upper 8bit Data	Middle Upper Data	Middle Lower Data	Lower 8bit Data	0xFF	Completed

Return Data1- Data4: 0x001E8480-0x002DC6BF (2,000,000-2,999,999)

(c) Operation Time

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	0x02	0xFF	0xFF	0xB3

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Return Data3	Return Data4	Check Sum	
Enquiry	0x70	0x00	0x05	Upper 8bit Data	Middle Upper Data	Middle Lower Data	Lower 8bit Data	0xFF	Completed

Return Data1 - Data4: 0x00000000-0xD693A3FF (0 sec.-3,599,999,999 sec.)

(d) Soft Version (Main CPU)

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	0x03	0xFF	0xFF	0xB4

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Check Sum	
Enquiry	0x70	0x00	0x03	Upper 8bit Data	Lower 8bit Data	0xFF	Completed

Return Data1 - Data2: 0x0000-0xFFFF

ex) In version0.100, it is set to 01 and 00.

(e) 8bits Register

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	Code Table(4-b)	0xFF	0xFF	0xFF

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Code Table (4-b)	0xFF	Completed

Code Table(4-b)

Function	Return Data	Unit
0x07 Digital 3.3v	0x00-0xFF	
0x09 Digital 5v	0x00-0xFF	
0x0A Temp1	0x00-0xFF	
0x0D Temp(P/S)	0x00-0xFF	
0x10 Analog 5V/9V	0x00-0xFF	5V Voltage Out

(f) Soft Version (Scaler)

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	0x0F	0xFF	0xFF	0xC0

Answer	Header	Answer	Return to Data Size	Return Data1	Return Data2	Check Sum	
Enquiry	0x70	0x00	0x03	Upper 8bit Data	Lower 8bit Data	0xFF	Completed

Return Data1 - Data2: 0x0000-0xFFFF

ex) In version0.100, it is set to 01 and 00.

(g)Shutdown Log

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Enquiry	0x83	0x30	0x11	0xFF	0xFF	0xC0

Answer	Header	Answer	Return to Data Size	Return Data1	Check Sum	
Enquiry	0x70	0x00	0x02	Shutdown Log	0xFF	Completed

Return Data1: 0x00-0xFF

Code Table(4-c)

Shutdown Information	
bit0	Reserved
bit1	1: FAN Movement Abnormal, 0: Normal
bit2	1: Panel communication Abnormal,
bit3	1: Temperature Sensor Abnormal, 0:
bit4	1: Main Power Abnormal, 0: Normal
bit5	1: Digital Power Abnormal (3.3V, 5V) 0: Normal
bit6	1: Analog Power Abnormal (12V, 9V) 0: Normal
bit7	Reserved

Code Table(4-d)

[a]Function		[b]Range/Switch code	Command			
			Control	Enquiry	Standby	Power On
0x00	Model Name	0x08-0x09	No	Yes	Enable	Enable
0x01	Serial Number	0x001E8480-0x002DC6BF (2,000,000-2,999,999)	Yes	Yes	Enable	Enable
0x02	Operation Time	0x00000000-0xD693A3FF (0sec.-3,599,999,999sec.)	Yes	Yes	Enable	Enable
0x03	Soft Version(Main)	0x0000-0xFFFF	No	Yes	Enable	Enable
0x07	Digital 3.3v	0x00-0xFF	No	Yes	Enable	Enable
0x08	MainPower(Vs)	0x00-0xFF	No	Yes	Enable	Enable
0x09	Digital 5v	0x00-0xFF	No	Yes	Enable	Enable
0x0A	Temp1	0x00-0xFF	No	Yes	Enable	Enable
0x0B	Temp2	0x00-0xFF	No	Yes	Enable	Enable
0x0C	Temp3	0x00-0xFF	No	Yes	Enable	Enable
0x0D	Temp(P/S)	0x00-0xFF	No	Yes	Enable	Enable
0x0F	Soft Version(Scaler)	0x0000-0xFFFF	No	Yes	Enable	Enable
0x10	Analog9V	0x00-0xFF	No	Yes	Enable	Enable
0x11	Shutdown Log	0x00-0xFF	No	Yes	Enable	Enable
0x12	Digital 3.3v(Failure)	0x00-0xFF	No	Yes	Enable	Enable
0x13	Digital 5v(Failure)	0x00-0xFF	No	Yes	Enable	Enable
0x14	Analog5V/9V(Failure)	0x00-0xFF	No	Yes	Enable	Enable
0x15	MainPower(Va)	0x00-0xFF	No	Yes	Enable	Enable
0x16	AnalogPower12V	0x00-0xFF	No	Yes	Enable	Enable
0x20	Busy to INPUT*	0x00 Non Busy 0x01 Busy	No	Yes	Enable	Enable

* Check Busy first, and then check Non Busy. If only checking Non Busy, it may not be detected correctly.

5. User Reset

Syntax	Header	Category	Function	Data1	Data2	Check Sum
Control	0x8C	0x50	Code Table(5)	0x02	0xFF	0xFF

Answer	Header	Answer	Check Sum	
Control	0x70	0x00	0x70	Completed
	0x70	0x03	0x73	Command Canceled

Code Table(5)

Function		Range/Switch code	Command			
			Control	Enquiry	Standby	Power On
0x00	Picture Reset		Yes	No	Disable	Enable
0x01	Audio Reset		Yes	No	Disable	Enable
0x02	Size Reset	Size, Shift, Dot Clock, Phase	Yes	No	Disable	Enable
0x03	Picture Reset2	Contrast, Brightness, Chroma, Phase	Yes	No	Disable	Enable